

# WOZZOO®

## Globe Fan

by IRIS USA, Inc.

Series PCF-SC15T-CT

## Ventilador de globo

 
de IRIS USA, Inc.

Series PCF-SC15T-CT

## Ventilateur de globe

de IRIS USA, Inc.

Series PCF-SC15T-CT

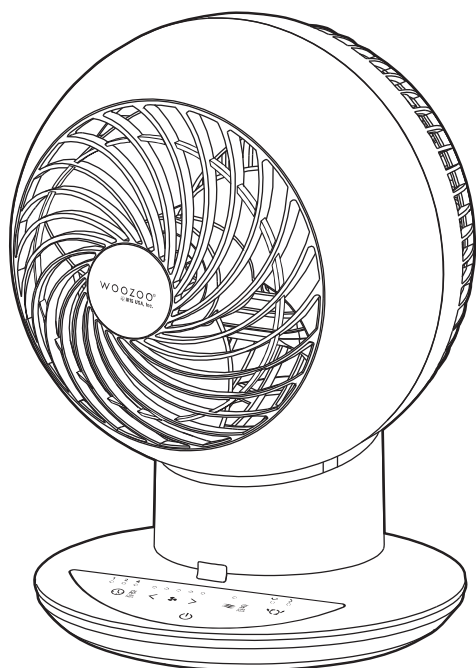

Thank you for your purchase. Please read this instruction manual carefully to ensure proper use. Read all safety precautions prior to use. Please store this instruction manual in a safe place for future reference.

READ AND SAVE THESE INSTRUCTIONS.

Gracias por su compra. Lea este manual de instrucciones para garantizar un uso adecuado. Lea todas las precauciones de seguridad antes de usar. Guarde este manual de instrucciones en un lugar seguro para consultas futuras.


LEA Y GUARDE ESTAS INSTRUCCIONES.

Merci de votre achat. Veuillez lire attentivement ce guide d'utilisation afin d'assurer sa bonne utilisation. Lire les précautions de sécurité à prendre avant utilisation. Veuillez conserver ces instructions pour référence future.

LIRE ET CONSERVER CES INSTRUCTIONS.

**How to Use /  
Cómo utilizar /  
Mode d'emploi /**


**2 ~ 3**

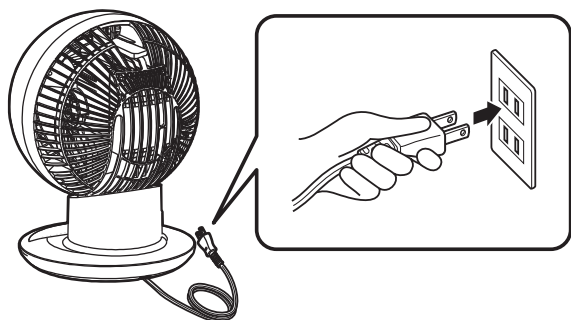 


**Turn the fan on. / Encender el ventilador. / Mettez le ventilateur en marche.**



 
**Change the air flow. / Cambiar el flujo de aire. / Modifiez le flux d'air.**

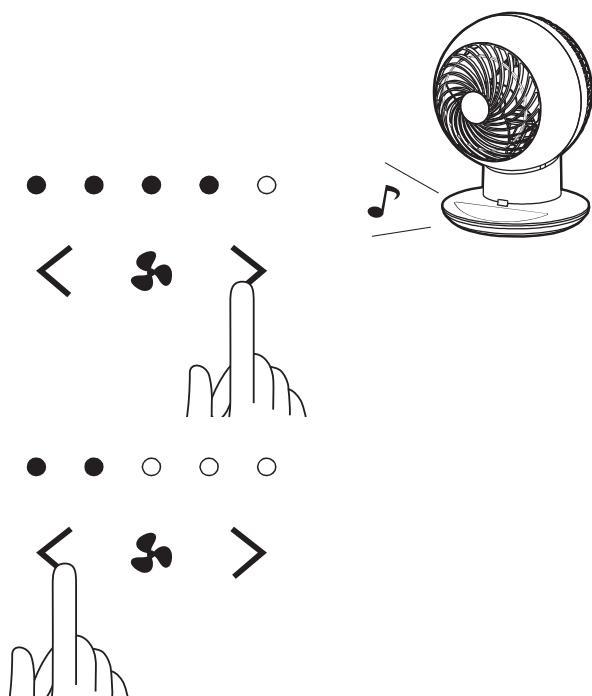


**Turn the fan off. / Apagar el ventilador. / Éteignez le ventilateur.**

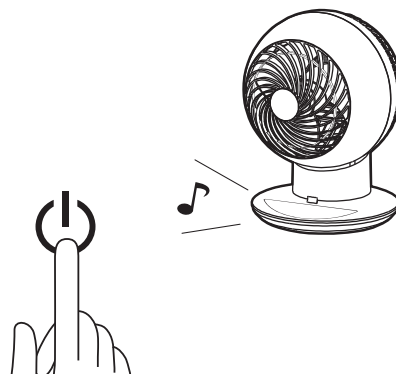 


**Natural Breeze Mode. / Modo Brisa Natural. / Mode de brise naturelle.**

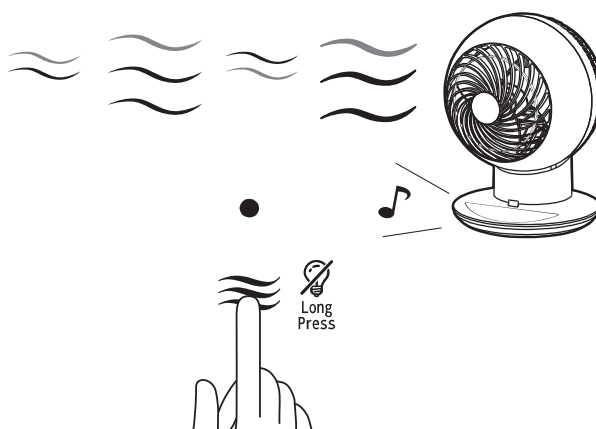 


**Long Press – Switch LED light On/ Off. / Pulsado prolongadamente, enciende/apaga la luz LED. / Appuyé longuement, allume/éteint la lumière LED.**

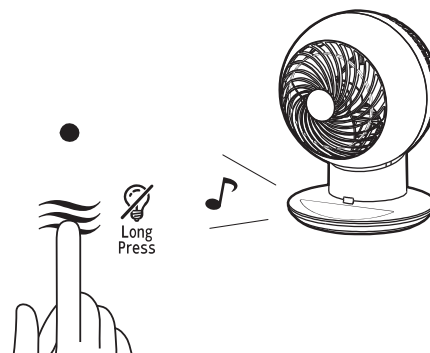 


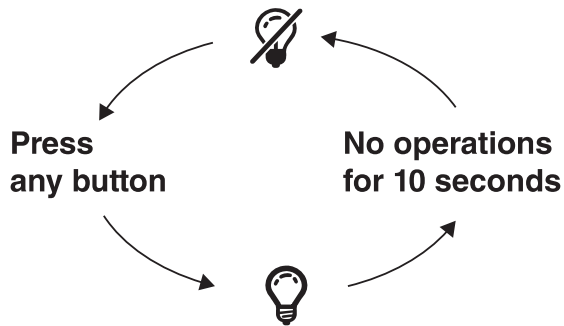 


 
Off Timer in 1, 2, or 4 hours. /  
Temporizador de apagado en 1, 2 ó 4  
horas. / Minuterie d'arrêt en 1, 2 ou 4  
heures.

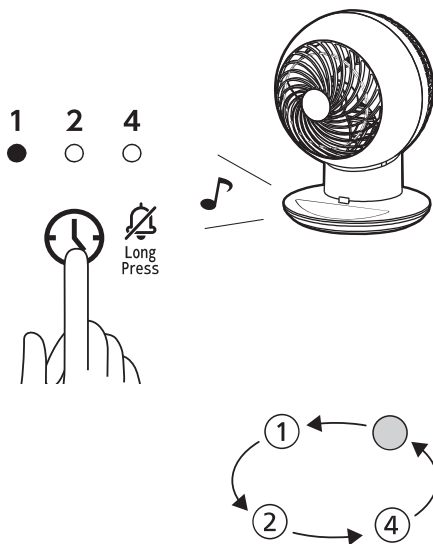

 
Long Press – Turn the beeping sound  
On/Off. / Pulsación larga - activar/  
desactivar el pitido. / Appui long -  
activez/désactivez le bip sonore.

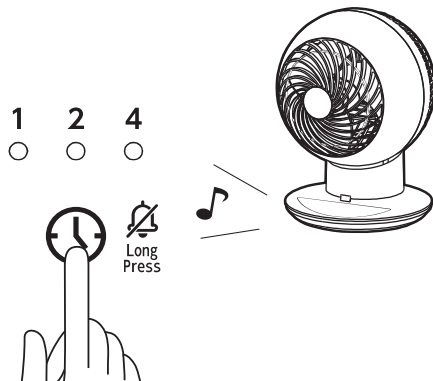

  Change the oscillation setting. /  
Cambiar el ajuste de oscilación. /  
Modifiez le réglage de l'oscillation.

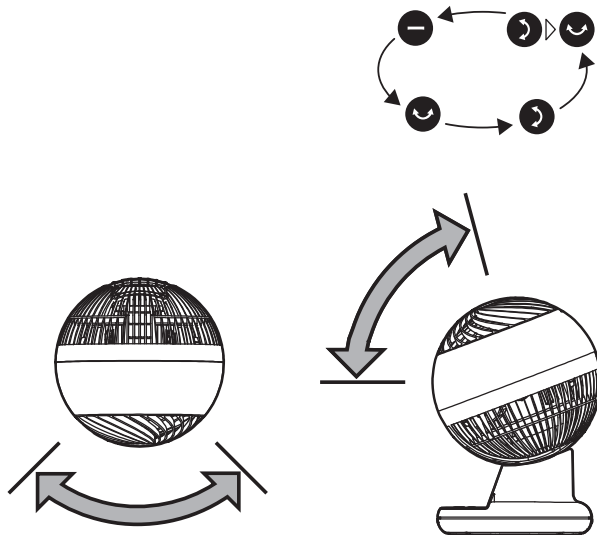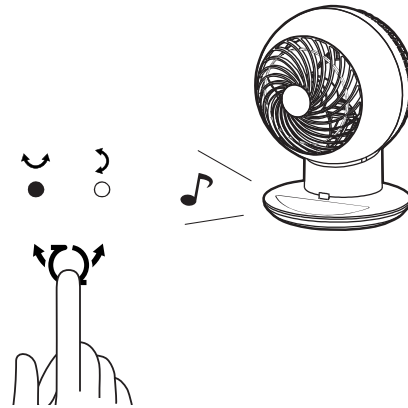

 Place the Remote Control here. /  
Colocar el mando a distancia aquí. /  
Activez la télécommande ici.

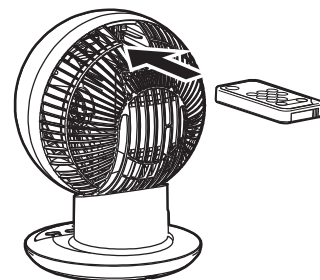

# CONTENT

## Preparations

Specifications .....	4
Safety Precautions .....	4
Placement .....	7
Parts .....	8

## Other

Cleaning and Maintenance.....	10
Troubleshooting.....	11
Warranty .....	12

# SPECIFICATIONS

MODEL	SPECIFICATIONS
RATED VOLTAGE	120-127 V~
RATED CURRENT	0.6 A
RATED FREQUENCY	60 Hz
PRODUCT SIZE	8.27 x 8.27 x 11.42 in 210 x 210 x 290 mm (WITHOUT POWER CORD)
PRODUCT WEIGHT	4.63 lbs / 2.1 kg
APPLICABLE AREA COVERAGE	About 353.4 ft <sup>2</sup> / 32.83 m <sup>2</sup>
POWER CORD LENGTH	About 70.9 in / 1.8 m

# SAFETY PRECAUTIONS

Prior to use, please read the safety precautions carefully to ensure proper use. The precautions listed here are described under classification of Warnings and Cautions, and are intended to prevent harm or damages to users and other persons. All of these precautions are critical in terms of safety. Please follow them at all times.

Graphic Symbol Indications: Indicates content that could lead to death or injury if handled incorrectly.



## CAUTION



## PROHIBITED



## INSTRUCTIONS THAT MUST BE FOLLOWED



## Disassembly prohibited.

- Do not disassemble, repair, or modify. Doing so can cause fire, electric shock, or injury.
- Repair by persons other than trained repair technicians can be dangerous.
- **WARNING:** To reduce the risk of fire or electric shock, do not use this product with any solid-state speed control device.





## Product use.

- For household use only. Do not use for commercial use. Do not use for anything other than the intended purposes. Do not use product for anything other than its intended use. Doing so could cause the product to malfunction or cause fire.
- Do not use the product near radio or televisions. Doing so may interfere with radio or television signals.
- Do not use in places exposed to direct sunlight or heating devices. Doing so may cause deformation, color change, or product malfunctions.
- Use on a level, stable surface. Placing product on uneven and unstable surface can cause the product to fall over, leading to injury or damage to property in the vicinity of the product.
- Place the product in locations where it will not get entangled in curtains or hoisting strings, etc. Failing to do so can cause damage to articles near the product.
- Always grasp the power plug to unplug it, do not unplug it by pulling on the power cord. Pulling on the power cord can damage it, which can cause fire or electric shock.

- Always unplug the power plug from the electric socket when the product will be unused for extended periods of time. Failing to do so can lead to fire or electric shock caused by short-circuits due to reduced insulation.
- This product employs overload protection (fuse). A blown fuse indicates an overload or a short-circuit. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to IRIS USA, Inc. for inspection and/or repair.
- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not run the cord under furniture or appliances. Arrange the cord away from high traffic areas and where it will not be tripped over.
- Please dispose of product and packaging materials according to proper government regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



#### Remote use.

 <b>WARNING</b>	
<ul style="list-style-type: none"> <li>• <b>INGESTION HAZARD:</b> This product contains a button cell or coin battery.</li> <li>• <b>DEATH</b> or serious injury can occur if ingested.</li> <li>• A swallowed button cell or coin battery can cause <b>Internal Chemical Burns</b> in as little as <b>2 hours</b>.</li> <li>• <b>KEEP</b> new and used batteries <b>OUT OF REACH of CHILDREN</b></li> <li>• <b>Seek immediate medical attention</b> if a battery is suspected to be swallowed or inserted inside any part of the body.</li> </ul>	

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The battery type : CR2025, The battery voltage : 3.0V
- Non - rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above ( manufacturer ' s specified temperature rating ) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns .
- Ensure the batteries are installed correctly according to polarity(+ and-).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Please use only the manufacturer recommended battery. Use of any other battery may cause risk of fire or injury, or damage to the surroundings from the battery rupturing and leaking.

# SAFETY PRECAUTIONS



## **Unplug.**

- Unplug the power plug from the electric socket when performing maintenance, inspecting, or moving the product.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Grasp the plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.



## **Use power plugs and power cords correctly.**

- Failing to do so can cause fire or electric shock due to short-circuits.
- Insert the power plug securely all the way into the electric socket.
- Regularly remove dust from the power plug.
- When dust is allowed to build up, insulation is hampered due to moisture, which can cause fire or electric shock. Use only 120-127V~. Other current/voltage can cause fires.
- Do not use if the power cord or the power plug is damaged, or if the power plug is loose when plugged into the electric socket. Doing so can cause fire or electric shock due to short-circuit.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



## **Do not damage the power cord.**

- Damaging, modifying, forcefully bending, pulling, twisting, putting heavy objects, or pinching can damage the power cord, which can cause fire or electric shock.
- Do not use if the power cord is bundled up. Doing so can cause fires. Always extend the cord out before using.
- Do not pull on the power cord when carrying or storing the product. Pulling on the power cord can cause fire or electric shock.



## **Abnormalities and malfunctions can cause smoke, fire, or electric shock.**

Stop use immediately, cut power, and unplug from the electric socket when abnormalities or malfunctions occur.

Examples of Abnormalities

- Abnormal sounds or odors.
- Power plug or power cord become abnormally hot.
- Loss of power, etc. when power cord is moved.
- The product periodically stops during operation.
- Tingling sensation from electric current felt when the product is touched.
- Stop use and contact IRIS USA, Inc. customer service at (602)707-1800.



## **Avoid fire hazards.**

- Do not spray with insecticides, hair sprays, or lubrication oils, etc.
- Do not use near flammable substances (kerosene, gasoline, paint thinner, etc.), objects that have flames (cigarettes, incense, etc.) or combustible materials. Can cause fires.
- Do not use the product with air flow pointed at a combustible appliance such as a heater. Doing so can cause incomplete combustion or scatter flames, which can cause carbon monoxide poisoning and fire.



## **Wet hands prohibited.**

- Do not unplug power plug when hands are wet.



## **Do not use the product outdoors.**

- Do not use in the vicinity of objects that obstruct the flow of air.
- Do not operate while covered or blocked with cloth, paper, or plastic bags, etc.
- Do not use in locations where there is a lot of dirt or dust. This can cause short-circuit or fire.
- Do not use in or near environments filled with sooty air. Doing so may cause a fire.
- Do not use in rooms with high humidity levels such as bathrooms.
- Do not get the unit wet, or put the unit in water. Getting the product wet can cause fire or electric shock.





**If handled incorrectly, contents can lead to personal injury or physical damage.**

- Keep out of reach of children and infants.
- Do not climb on or tip the product over. Doing so may lead to injury or electric shock.
- Make sure to hold the handle while moving product. Do not drag the product when moving it. Dragging product can damage carpet and floors.
- Do not point air flow directly at your body. It generates a very strong air flow.
- Be especially mindful not to allow children or elderly people near product. Being near the product can be harmful to their physical condition and to their health.
- Air blowing directly on plants may be harmful.
- Do not operate without attaching the vane or the cover. Doing so can cause injury, electric shock, or fire.
- Do not strike the unit forcefully. Doing so can cause the product to malfunction, leading to fire or electric shock.



 
#### **User Servicing Instructions.**

- If the fuse on your fan has blown, grasp the plug and remove it from the outlet. Do not pull the cord to unplug.
- To open, slide the fuse cover towards the prongs of the plug.
- Carefully remove the old fuse and snap the replacement fuse into place. To reduce the risk of fire, only replace the fuse with another fuse of the proper rating (2.5Amp, 125Volt). Slide the fuse door back into place to close. Discard the blown fuse. The plug should now be ready for normal use.
- Risk of fire. Do not replace the attachment plug. Product contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged.
- If you need further information on how or when to replace the fuse in plug, please contact IRIS USA, Inc. customer service at (602)707-1800.
- **WARNING: To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).**


## **PLACEMENT**

Place the product on a level floor or table free of any obstructions.


- Place the product in locations where it will not come in contact with direct sunlight, or hot air from air conditioning or heating appliances. Such contact can cause the product to deform, change color, or malfunction.
- Do not place the product near the radio or TV. The product may cause noise on radio and affect the TV signal.

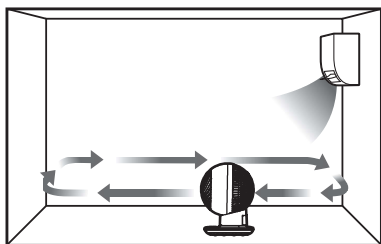


**Use with Air Conditioner**

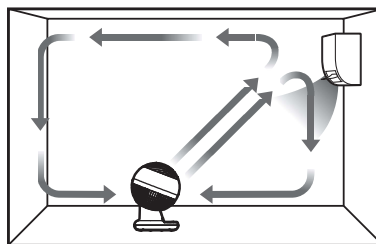 


**Use with a Heater**

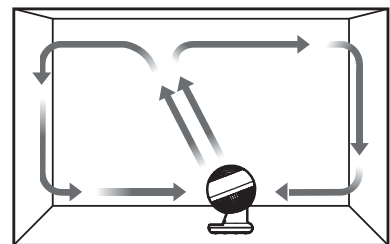 


**Circulation**

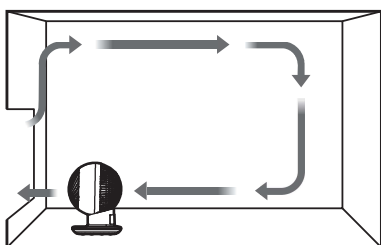 

**Ventilation**

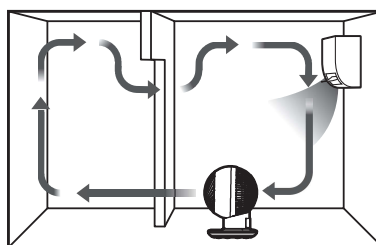 


**Two room Circulation**

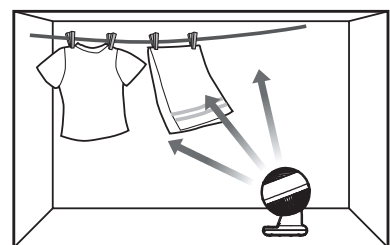 


**Drying Laundry**

# PARTS

 
## ■ Front

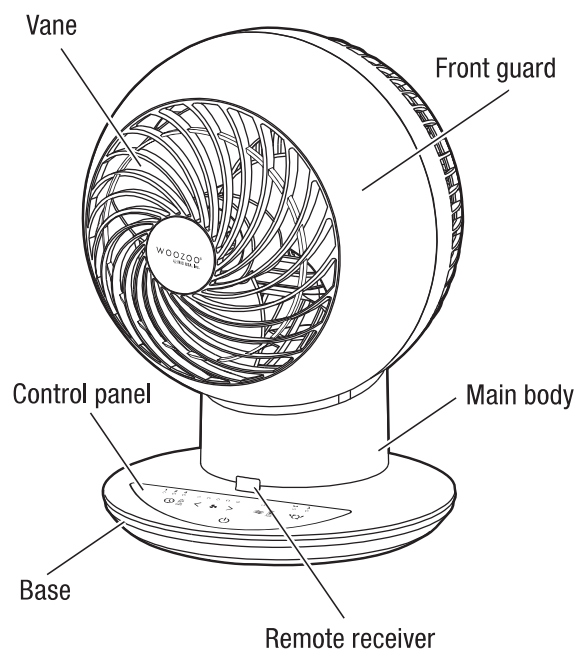

## ■ Back

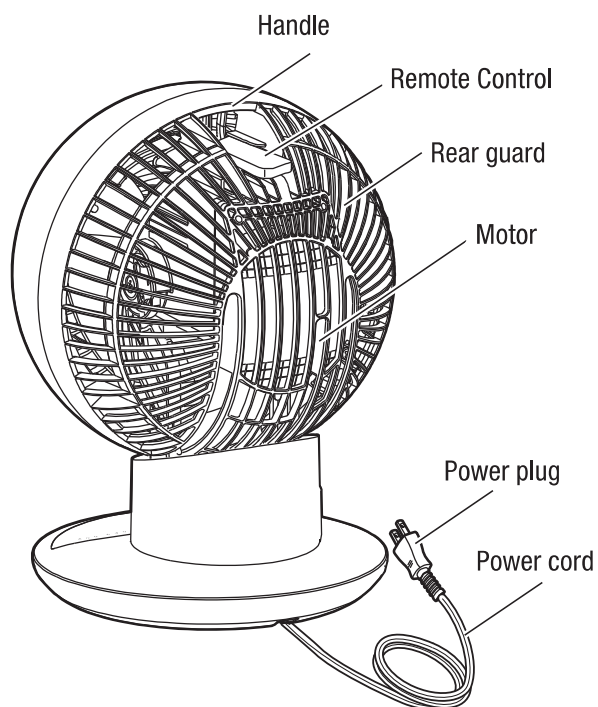 


## ■ Control Panel

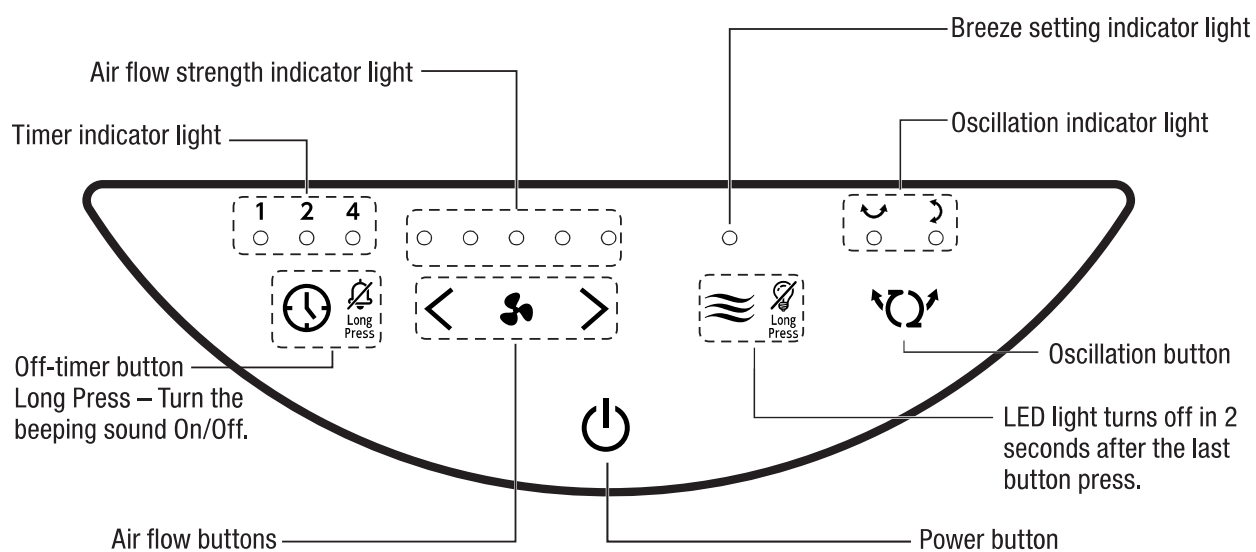 




## ■ Remote Control

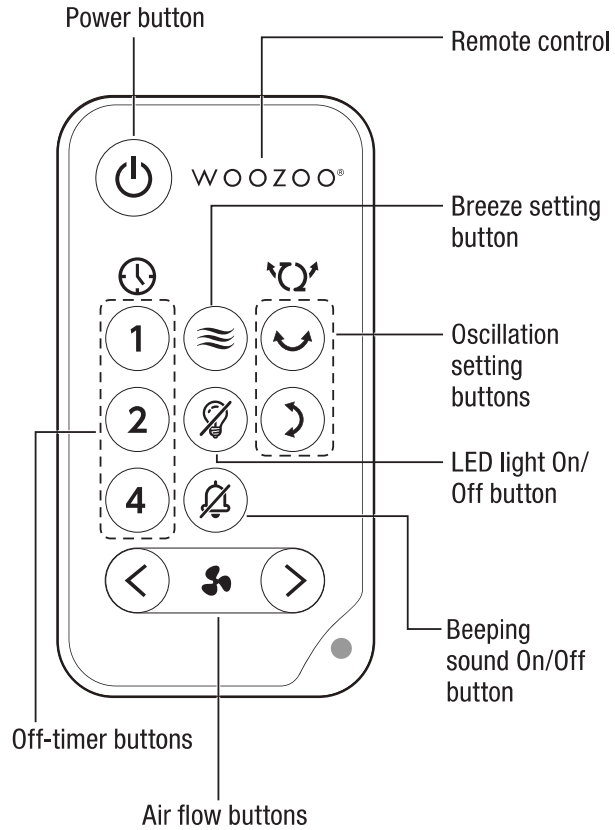 


## ■ Change The Battery

 
1

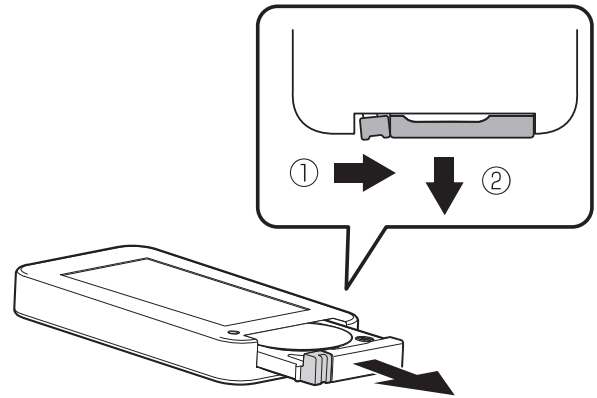


2

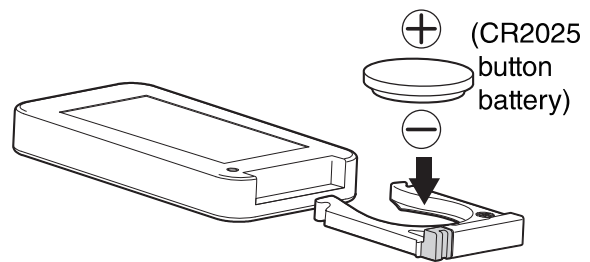 

3

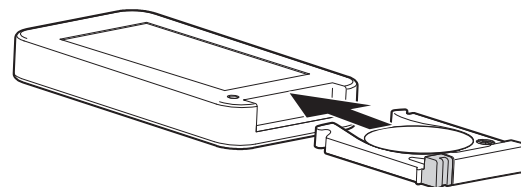 

## ■ Before First Use

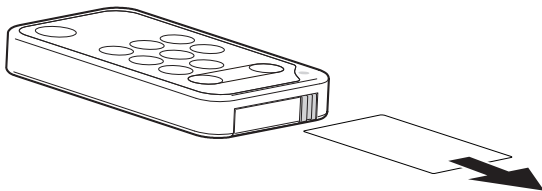 

Improper handling of the battery can lead to battery rupture, leaking battery liquid, and damage to the surroundings. Please read the 'Remote use' section of the safety precautions before use.

# CLEANING AND MAINTENANCE



 
Always turn off the power and unplug the power plug from the electric socket when cleaning the product. Use caution, the motor will be hot immediately after use. Confirm the motor has cooled before cleaning the product.

Do not use paint thinner, alcohol, benzene, alkaline detergent, or bleach, etc. when cleaning the product. Using such substances can cause damage, malfunctions, or changes in color, shape, and quality.


Using the product in dusty condition can cause it to malfunction. Check and clean the product regularly.

## ■ Internal Cleaning


1

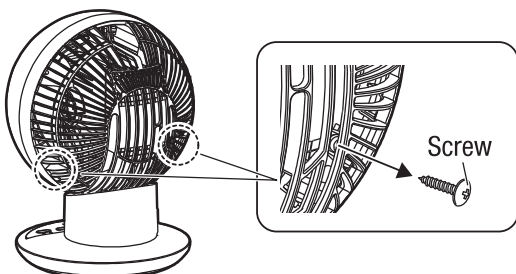


2

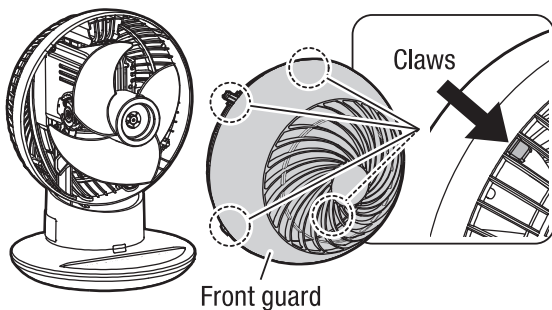 


3

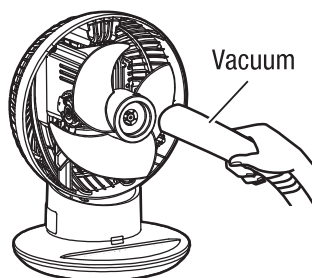 


4

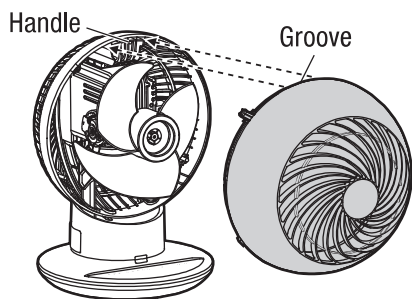 


5

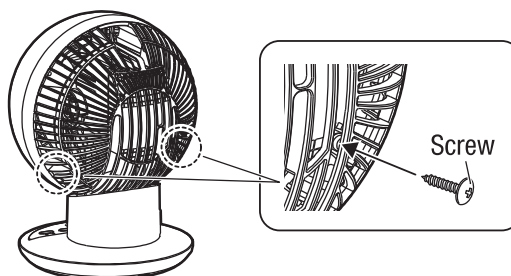 

## ■ Wipe with a soft cloth

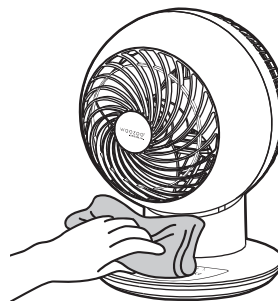 

## ■ Storage method

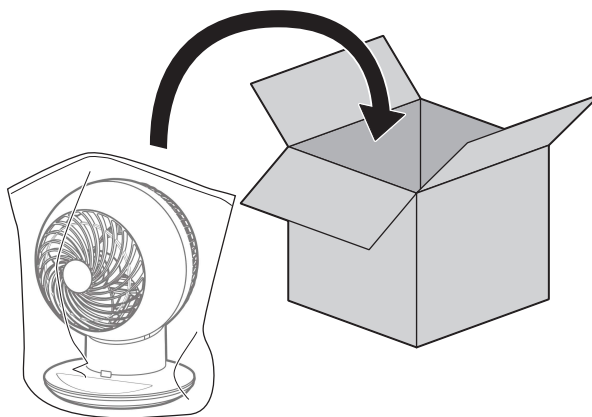 

# TROUBLESHOOTING

Before making repairs, please read the following content carefully to fix common problems.

STATUS	POSSIBLE CAUSE	REMEDY
No power (Indicator is off)	Power plug is not securely plugged into the electric socket.	Please plug the power plug securely into the electric socket.
Product operation cannot be controlled by remote	Battery power is low.	Please insert a new battery.
	Direction of polarity of the battery is placed incorrectly.	Please ensure the battery is inserted correctly.
	Something is blocking the infrared sensor and the remote receiver.	Please ensure there is a clear path between the sensor and the receiver.
	The remote isn't facing the correct direction.	Point the sensor on the remote at the remote receiver on the main body from a maximum of 16.4 ft/5.0 m away.
Product makes loud noise while operating	The product is placed on an uneven surface.	Place the product on a level, stable surface.
	The front guard is not securely attached.	Attach the front guard properly.
Low air flow strength	Dust has accumulated.	Please clean to remove the dust.
Product makes loud noise while oscillating	During oscillation, motor sounds will increase.	This is normal.

Problems that could not be resolved.

Please contact the dealer of purchase or IRIS USA, Inc. Customer Service.



Do not disassemble, repair or modify the product yourself. Any other servicing should be performed by any authorized service representative.

## ■ Product Used Over Long Periods of Time

If any of the following problems occur due to use over long periods of time, cut power immediately, unplug from the electric socket, and contact IRIS USA, Inc. customer service at (602)707-1800.

- There is no response when power switch is pressed.
- Product makes a strange noise when operating.
- While turning, the vane changes speed irregularly.
- Power cord is bent or damaged.
- Power turns on and off when power cord is touched.
- Product gives off a burnt smell.



Various factors can have an impact on the product degradation and malfunction.

If abnormalities like those listed above occur even when the product has not been used for the displayed standard period of use, stop use immediately and contact IRIS USA, Inc. customer service at (602)707-1800.

# WARRANTY

## THE MANUFACTURER WARRANTIES

Your IRIS USA, Inc. products are to be free from defects in material and workmanship under normal non-commercial, household use, when operated and cared for in accordance with the Manufacturer's written instructions provided.

## THE 5-YEAR WARRANTY ("WARRANTY") DOES NOT COVER

Any damage caused by accident, misuse, or abuse, including without limitation, damage caused by use in a humid area, improper cleaning, neglect, alteration, fire, theft, non-recommended temperature use and does not apply to minor imperfections, scratches, stains, discoloration, surface markings as a result of shipping or other damage to external or internal surfaces which does not impair the utility and/or functionality of the product.

## TO OBTAIN SERVICE

If service should be necessary, you should contact IRIS USA, Inc. Customer Service ("Customer Service") at (602)707-1800. You may then return the properly packaged product(s), (using adequate packing and shipping material to prevent damage in transit), with postage prepaid along with name, address, telephone number, model number, and proof of date of purchase (a copy of the receipt) and a detailed description of the claimed defect. This warranty shall not cover any damage incurred to the products during transit to Customer Service. You shall have the obligation and responsibility to: pay for all services and parts not covered by the warranty.

## MANUFACTURER'S OBLIGATION

The Warranty may not be altered, expanded, extended, revised or varied except by written instrument executed by the Manufacturer.

THE MANUFACTURER'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT(S) AT THE MANUFACTURER'S SOLE AND EXCLUSIVE OPTION. THE MANUFACTURER WILL REPLACE ANY ITEM FOUND TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITH THE MOST COMPARABLE CURRENT ITEM. IRIS USA, INC. DOES NOT ACCEPT SPECIAL REQUESTS, NOR DO WE HAVE THE ABILITY TO UPGRADE IN EXCHANGE FOR MONEY. THE MANUFACTURER SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER DIRECT OR INDIRECT. THE WARRANTIES SET FORTH HEREIN ARE EXCLUSIVE AND NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE ARE MADE WITH RESPECT TO THE PRODUCTS.

Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation exclusions may not apply. This Warranty gives specific legal rights, and there may also be other rights which vary from state to state.

## DISCONTINUED ITEM RETURNED

If the item returned is discontinued and is no longer available, IRIS USA, Inc. will automatically replace your item with the most comparable item currently manufactured.

Attn: Customer Service (Returns Department)

IRIS USA, Inc.

13423 West Cactus Road

Surprise, AZ 85379

©2024 IRIS USA, Inc. All rights reserved.